

Phottix Accessory Cables N8

Cable Compatibility models:

Nikon

D5, D4S, D4, D3X, D3s, D3, D2Xs, D2X, D2Hs, D2H, D1X, D1, D810A, D810, D800, D700, D500, D300s, D300, D200

Fuji

S5 Pro, S3 Pro

 


Phottix Accessory Cables N10

Cable Compatibility models:

Nikon

D750, DF, D610, D600, D7200, D7100, D7000, D5600, D5500, D5300, D5200, D5100, D5000, D3300, D3200, D3100, D90

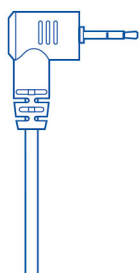

Phottix Accessory Cables C6

Cable Compatibility models:

Canon

EOS M, EOS M5 EOS 1000D / Rebel XS / Kiss F, EOS 1100D / Rebel T3 / Kiss X50, EOS 1200D / Rebel T5 / Kiss X70, EOS 1300D / Rebel T6 / Kiss X80, EOS 100D / Rebel SL1 / Kiss X7, EOS 300D / Digital Rebel / Kiss Digital / DS6041, EOS 350D / Digital Rebel XT / Kiss Digital N, EOS 400D / Digital Rebel XTi / Kiss Digital X, EOS 450D / Rebel Xsi / Kiss X2, EOS 500D / Rebel T1i / Kiss X3, EOS 550D / Rebel T2i / Kiss X4, EOS 600D / Rebel T3i / Kiss X5, EOS 650D / Rebel T4i / Kiss X6i, EOS 700D / Rebel T5i / Kiss X7i, EOS 750D / Rebel T6i / Kiss X8i, EOS 760D / Rebel T6s / 8000D, EOS 60D, EOS 70D, EOS 80D

Pentax

645Z, 645D, K-1, K-5, K-5II, K-7, K-50, K-500, K-30, K20D, K-x, K-m, K10D, K100D, K110D

Samsung

NX11, NX20, NX100, NX210, NX1000, GX-10, GX-20, GX-1L, GX-1S

Sigma

 
SD-1M, SD-1, SD-14, SD-15, SD-10, SD-9

Hasselblad

H series

Fuji

X-Pro2, X-T2X-T1, X-T10, X-E2S, X-E2, X-E1




Phottix Accessory Cables C8

Cable Compatibility models:

Canon

 EOS D30, EOS D60, EOS 10D, EOS 20D EOS 30D, EOS 40D, EOS 50D, EOS 5D, EOS 5D Mark II, EOS 5D Mark III, EOS 5DS, EOS 5DS R, EOS 6D, EOS 7D, EOS 7D Mark II, EOS-1D, EOS-1Ds, EOS-1D Mark II, EOS-1Ds Mark II, EOS-1D Mark II N, EOS-1D Mark III, EOS-1Ds Mark III, EOS-1D Mark IV, EOS-1DX, EOS-1DX Mark II, EOS-1D C



Phottix Accessory Cables S8

Cable Compatibility models:

Sony

A99 II, A99, A77II, A7R II, A7R, A7S II, A7S, A7II, A7, A6500, A6300, A6000, A5100, A5000, RX100 V, RX100 IV, RX100 III, RX100 II, RX-10 III, RX-10 II, RX-10, RX-1R II, RX-1R

