












Elinchrom Flash Unit	Enter Update Mode	Requirements	Information
ELC 125 / 500	Plug the USB cable into the unit and computer, then connect the mains cable and launch the Updater .	<p style="text-align: center;">Updater Software</p> <p style="text-align: center;">+</p> <div style="display: flex; justify-content: space-around; align-items: center;">  or  </div> <p style="text-align: center;">USB Cable Elinchrom Bridge</p>	<p>Wireless update procedure via the Elinchrom Updater.</p> <p>Follow the instructions on the Updater Software to update your Elinchrom unit.</p>
ELC Pro HD 500 / 1000	Switch the Unit OFF, hold the USER button and press also ON until the display shows " firmware update ".  +  + hold 3 seconds The Update process must run twice, there are 2 Micro controller to be updated.	<p style="text-align: center;">Updater Software +</p> <div style="text-align: center;">  </div> <p style="text-align: center;">Elinchrom Bridge</p>	
ELB 400	Connect the unit via the USB cable to your computer.  +  + hold 3 seconds		
ELB 1200	Connect the unit via the USB cable to your computer.  +  + hold 3 seconds	<p style="text-align: center;">Updater Software</p> <p style="text-align: center;">+</p>	
ELB 500 TTL	The "Update Mode" is not required, just connect the USB cable to the device and the computer and start the Updater .		Update via USB connector and the Elinchrom Updater
Transmitter Pro / Plus HS		<p>USB Cable</p> <p>USB-A to USB-Micro USB-A to USB-Mini for the Transmitter</p>	
Elinchrom Bridge	Plug the USB cable into the Bridge and the computer. Hold  for 5 seconds LED flashes twice every second in yellow. Start Updater		

Download the Updater Software:
https://www.elinchrom.com/support_downloads.php?q=software+updater
Firmware Release Notes:
<https://www.elinchrom.com/support/firmware-release-notes.html>