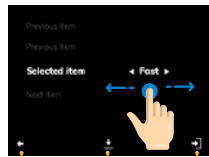## Screen Views

4.3

Work Screen
Shows the most important settings, once the unit is configured. Displayed automatically after 45 sec of inactivity.
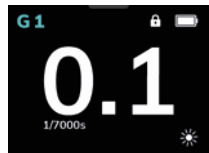
Previous item
Previous item
Selected item ◄ Fast ►
Next item

Back   Save   Exit

Sub-menu Screen
Select feature by scrolling.

Swipe left or right to change value between the arrows

Screen Lock

G 1

0.1
1/7000s

To activate the touch screen lock, press the Menu button, select the Setting wheel and go to Touch and select on/off

Connection

The ONE/THREE should only be used between -10°C and 40°C. Only charge between 0°C and 40°C.

USB-C socket for charge and firmware update.

Hard reset hole.

USB-C Charger
Use only the original Elinchrom ONE/THREE USB Charger to recharge the built-in Li-Ion battery.

When the unit is OFF the side logo color shows the charge status:
Red: recharging
Orange: almost charged
Green: the unit is charged

Recharging time: 100 min. to 100%

Elinchrom ONE:
Battery capacity min./max power: 9700/725 flashes per charged battery.

Elinchrom THREE:
Battery capacity min./max power: 11250/525 flashes per charged battery.

Reset To Default Settings
Switch the unit on, and release the ON button.
When the EL Logo appears press immediately the "ON" and "Menu" button for 4 seconds until the display shows "Reload all default parameters".

elinchrom®

ONE
THREE

www.elinchrom.com

Quick Start Guide

Setup Menu

Action mode — Switch on/off

Settings — Submenu access

Sound — Switch on/off

Photocell — Switch on/off

To access the menu short tap on screen with 2 fingers

	Settings	
1.	Flash before ready	Yes/No
	Flash scale	EL-Scale, 10 F-stop scale, Ws
	Modlamp VFC	Off/On
	Modlamp Timer	Off/15"/30"/60"
	Modlamp Scale	F-stop/Percent
	Favorite function	Modlamp/Flash mode/Audio/ Photocell/Recycling mode
	Auto stand-by	Off, 1 to 59 min. Auto-off and auto stand-by shall be set independently. Auto stand-by cannot disable auto off.
Settings	Auto-off	Off, (Auto stand-by+1) to 60 min. It shall be longer than Auto stand-by. Minimum value = auto stand-by + 1min.
	EL logo mode	Low, High, Off, Low on ready, High on ready
	EL logo color	Group color, White
	Ready tone	1, 2, 3
	Ready volume	Off, Low, Medium, High
	Keyboard click	Off/On
	Skyport	Off/On
	Touch	Off/On
	Wireless update	Setup wifi SSID and password

Groups — Swipe to choose the Group

Presets — Select, the color temperature

Frequencies — Swipe to choose the frequency

Background — Switch to black or white

Info

Bluetooth — Switch on/off

	Info	
	Friendly name	Elinchrom ONE/THREE, can be changed with the computer or smartphone app.
	Firmware rev.	*******
	Skyport ID	*******
Info	Life time	In hours (hhhh:mm)
	Power-on count	How many times the units has been turned on
	Flash count	Total flash number

Control panel / Touch Screen

G1
4.3

Photocell

Long press: on/off
Short press: switch display to Lock on / Flash / Modelling Lamp / LED colour temperature

Menu

Save button: press for validate your choice

CW: +0.1 f-stop / down
CCW: -0.1 f-stop / up

Display panel – Dashboard

The colour of the Group corresponds to the group number : blue for group 1, yellow for group 2, red for group 3 and green for group 4. The Elinchrom logo on the side of the unit illuminates with the color of the selected group.

1   2   3   4

G1
4.3

1. Group 1-4
2. Modelling lamp menu
3. Battery status
4. Favorite Function; default setting is Mod. Lamp on/off
5. Power value

Modelling lamp

Swipe down to access the modelling lamp menu

Swipe left/right to change values

G1
100%
3500K
Free

Short touch to access and change the colour temperature

G1
3500K
100%
Free